

HIDES
SIMPLY

OPENS
SMOOTHLY

CLOSES
SECURELY

*Phantom provides
retractable screens for*

experience the
SERVICE



DOORS



WINDOWS



**LARGE
OPENINGS**

*There when you need us, enhancing your
lifestyle, making us your choice for retractable
screen solutions... experience Phantom.*

**Your Phantom Screens Representative
1-888-PHANTOM**



experience the
SIMPLICITY

FOLLOWING THE MAINTENANCE GUIDELINES BELOW WILL ENSURE YEARS OF WORRY FREE SERVICE FOR YOUR SCREENS.

Operation

- Proper use of your screen will ensure longevity of the screen.
- Retractable screens are intended to provide reasonable insect control and solar shading – not the retention and/or security of objects, animals or persons.
- Screens may retract suddenly – for manual retractable screens keep hold of the sidebar or handle during operation.
- Do not push or kick the mesh to release the magnet or latch.
- It is normal for the mesh to “sail” in certain windy conditions which may cause the mesh to pull out of the track. Simply open and close the screen to return the mesh to the track.

Care and Maintenance

- Proper maintenance of your screen will ensure longevity of the screen.
- Screens should be retracted into their protective storage housing when not in use to preserve and extend the life of the mesh.
- Ensure tracks are kept free of dirt and debris.
- Clean and lubricate the tracks with Phantom’s greaseless silicone spray.
- Clean mesh fabric, housing, tracks and sidebar with water, mild detergent and a soft brush – not with harsh chemicals or a pressure washer.
- Allow mesh to dry before rolling it back up into the housing.

Executive Motorized Screens Specific Instructions

- Motorized screens should be watched during operation.
- If an object prevents the unit from lowering, lift the sidebar up manually and remove the obstacle.
- If the sidebar is not level, use the remote control to lower the mesh until the sidebar is level.
- Interruption of power can affect motorized unit operation. Ensure that power is still getting to the unit by checking circuit breakers and ground faults for resetting.
- Remote controls have a limited battery life. Replace the battery if the light does not come on when the buttons are pressed.
- Wind load may affect the screen’s operation. Motorized screens should not be operated in winds in excess of 25 mph.

Contact your Phantom Screens Representative at 1-888-PHANTOM or consult the Support section at phantomscreens.com for more information.